MiFi LTE M300 Router

User Manual

Safety Precautions

Read the safety precautions carefully to ensure the correct and safe use of your wireless device.

	Do not switch on your device when the device use is prohibited or when the device use may cause interference or danger
	Follow the rules or regulations in hospitals and health care facilities. Switch off your device near medical apparatus
	Switch off your device in an aircraft. The device may cause interference to control signals of the aircraft.
	Switch off your device near high-precision electronic devices. The device may affect the performance of these devices.
	Do not attempt to disassemble your device or its accessories. Only qualified personnel are allowed to service or repair the device.
	Do not place your device or its accessories in containers with strong electromagnetic field
	Do not place magnetic storage media near your device. Radiation from the device may erase the information stored on them.
	Do not put your device in a high-temperature place or use it in a place with flammable gas such as a gas station.

	Keep your device and its accessories away from children. Do not allow children to use your device without guidance.
	Use approved batteries and chargers only to avoid explosion
	Observe the laws or regulations on device use. Respect others' privacy and legal rights when using your device

It is recommended that the equipment only be used in the environment where temperature is between 0℃and 50℃and humidity is between 10% to 90%

◎Overview

Thank you for choosing the MiFi LTE M300 Router.

Supported functions and actual appearance depend on the specific models you purchased. The illustrations are provided for your reference only. For details about the model you selected, consult your service provider. This guide briefly describes the functions of the 4G router. For more details, see help on the web management page.

◎Appearance

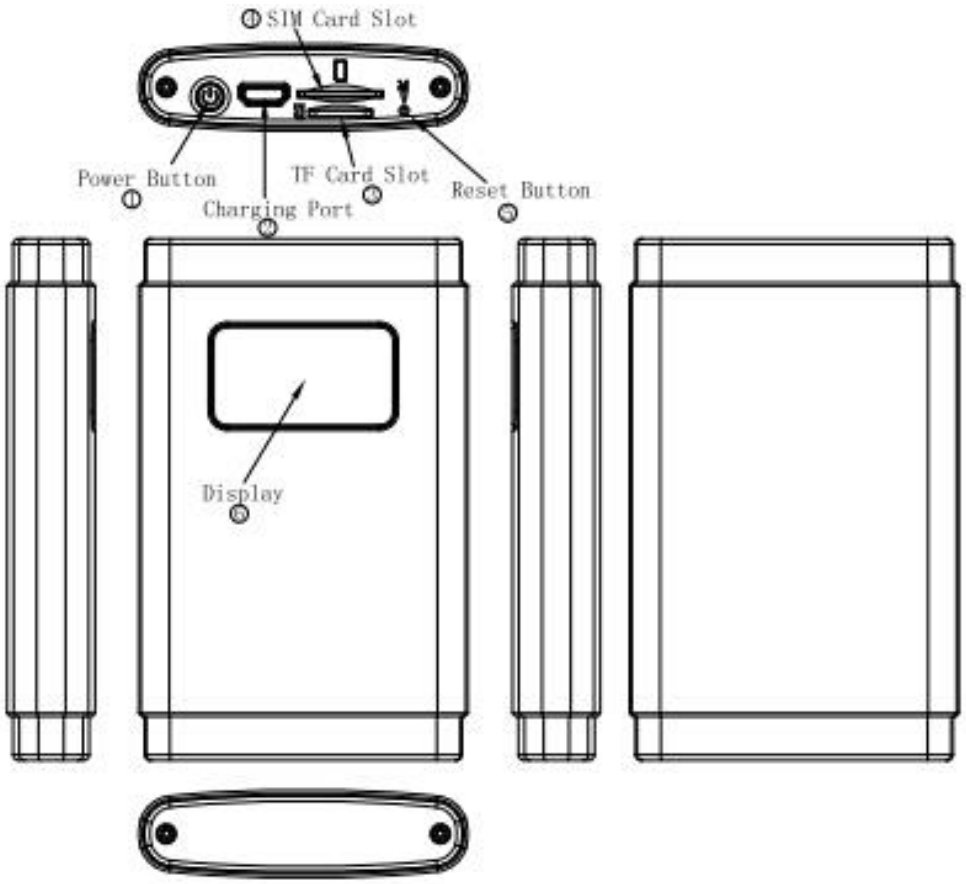

No.	Item	Actions
1	Power Button	• Press and hold the power button for 5 seconds to turn on/off • When the display is off, the first quick press wakes up the display
2	Charging Port	The Micro USB charger connects here
3	TF Card Slot	The TF card installation slot
4	(U)SIM Card Slot	The (U)SIM card installation slot
5	Reset Button	Reset the product default settings
6	Display	Provides router working status

◎Screen Display

No.	Display Icon	Description
1.	No Icons	The MiFi is powered off or not receiving power, or the screen is in power-saving mode.
2.	Signal strength	4G: Using 4G network. 3G: Using 3G network. E: Using Egde network. G: Using GSM network. More bars indicates a stronger wireless signal.
3.	Roaming Indicator	If this icon is displayed, your MiFi is roaming.
4.	Wi-Fi Indicator	: Wi-Fi enabled, no device connected :Number of devices connected
5.	Battery Indicator	More white on the battery indicates more battery life.
6.	Message Indicator	New messages Message Inbox full
7.	Charging Indicator	This icon indicates that the device is currently connected to the chargers.

◎Installing the SIM Card

Caution: Do not use any SIM card that is not standard or is incompatible with the router .Otherwise, the router will be damaged. Insert the SIM card in the card slot. Be sure that the SIM card is facing in the right direction as shown in the following figure, and then slide the SIM card into the slot.

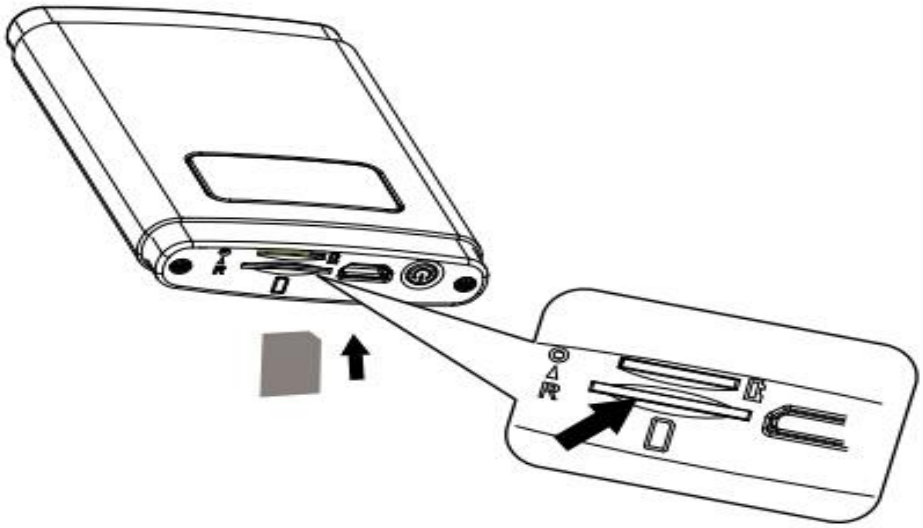

◎Installing the TF (Micro SD) Card

Insert the TF card in the card slot. Be sure that the TF card is facing in the right direction as shown in the following figure, and then slide the TF card into the slot.

（Similar to the above）

Note: Micro SD card support up to 32GB.

◎Charging the Battery

※Using the charger

Caution: Only use chargers compatible with the router, use of an incompatible charger or one from an unknown manufacturer may cause the router to malfunction, fail, or could even cause a fire. Such use voids all warranties, whether expressed or implied on the product. The charger is an optional accessory. IF the charger is not provided in the package, contact your local dealer to buy one.

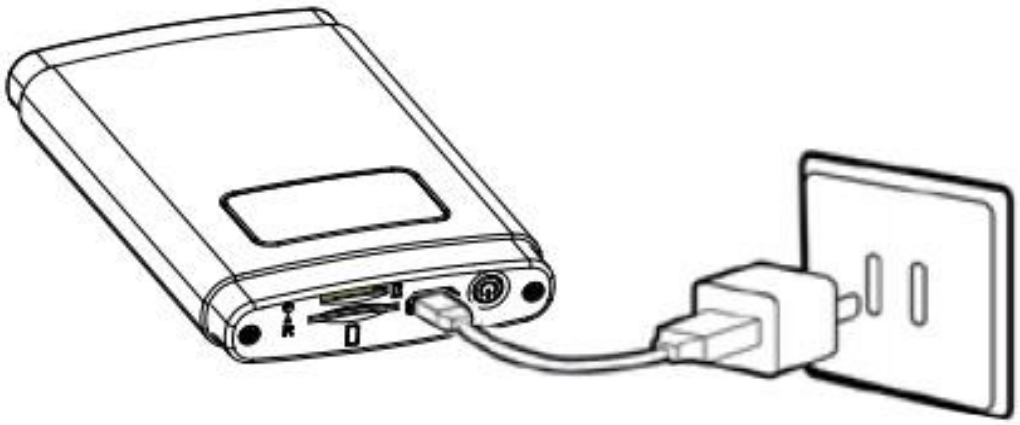

※Connecting to a PC for charging

Connect the router to a PC using a compatible data cable.

Note: Input voltage range +5±0.25V,≥1A.

◎Restart router

Make sure router power on，short press（≤1S） RESET button, restart your router will not change any parameters.

◎Restoring Factory Defaults

If you forget the changes you have made to some parameters, you may restore factory defaults and reconfigure the router. To restore the factory defaults, press and hold the RESET button until the LED turn off and then turn on again. All factory default setting are successfully restored.

Note: Restoring factory defaults deletes all personal configuration settings and restore all web based management settings and

parameters to the default values.

◎Connection Scenario

Scenario 1: Connect to Internet via USB（USB modem）

Step 1: Install SIM card and power on, connect router with computer via USB connector.

Step 2: Install application driver step by step according to tip.

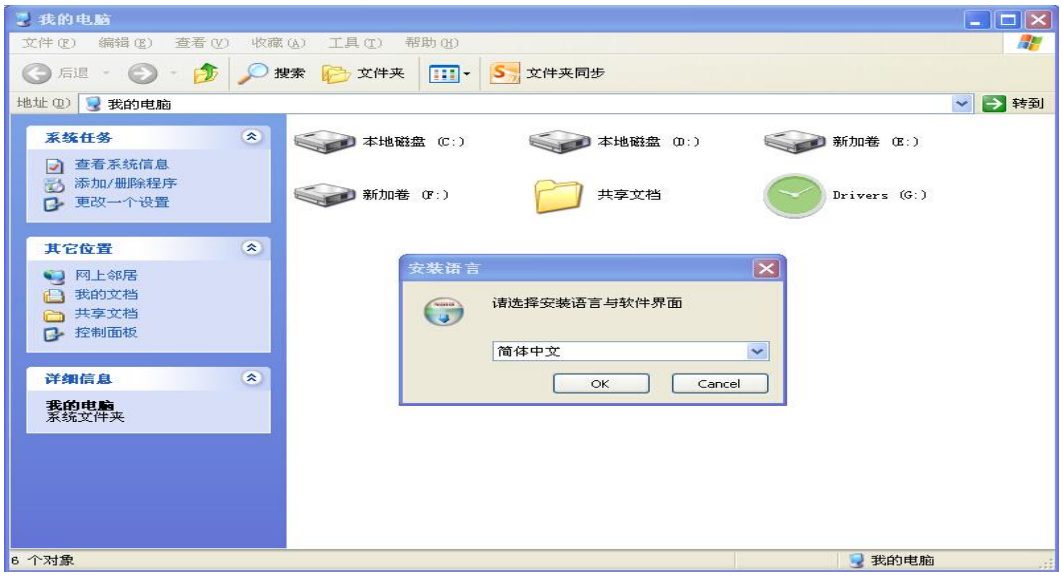

Step3:Surfing internet after the network adapter installation done.

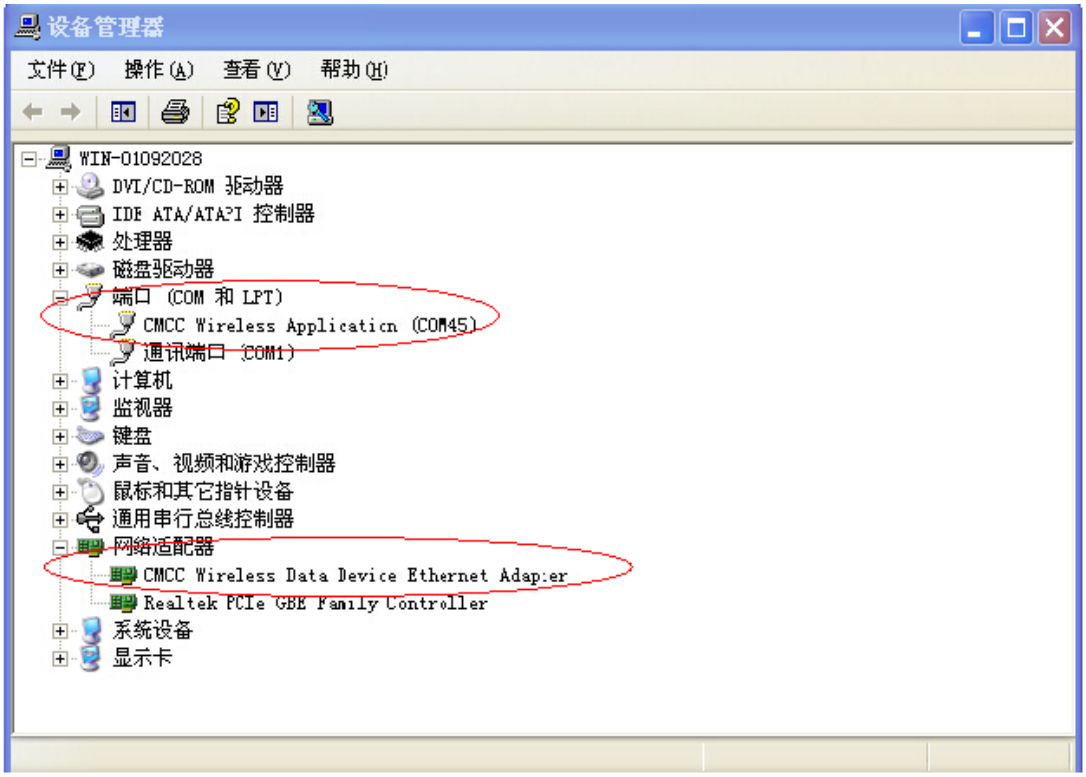

Scenario 2: Connect to Internet via WLAN

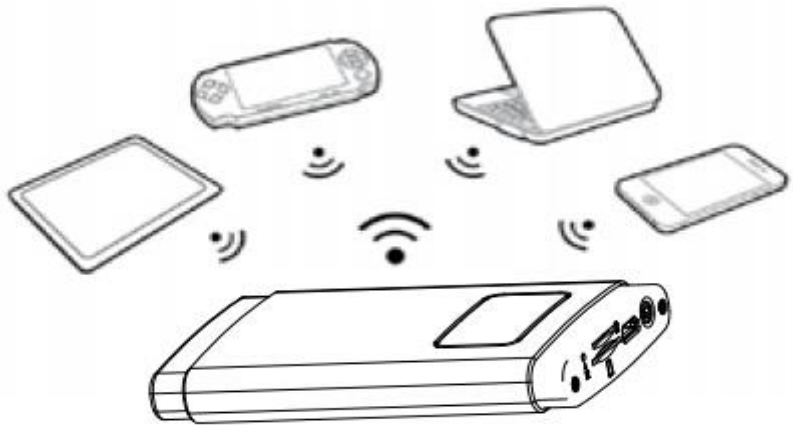

Step1: Install SIM card and power on.

Step2: Establish a WLAN connection.

Scenario 3: Connect to Internet via WLAN and USB

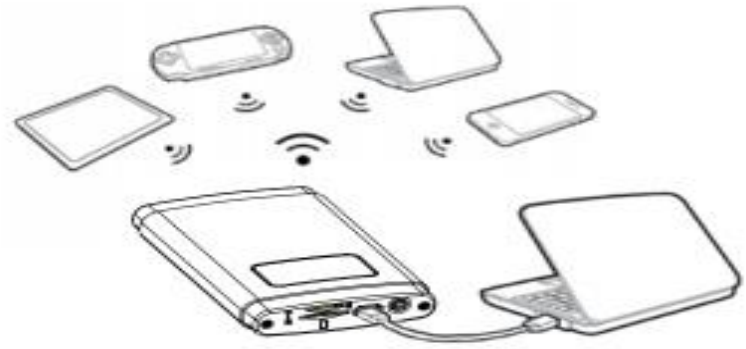

◎Operating System and Browser support

Item	Description
Operating system	Windows XP、Vista、win7、win8
	MAC OS 10.6 or higher，up to 10.8.2
	Android 2.2 or higher
Browser	IE 10.6 or higher
	Chrome……

◎Accessing the Web Management Page

Step1: Make sure that the connection between the router and the

client is a proper one.

Step2: Start the internet browser and enter: http://192.168.43.1 in the address bar.

Step3: Enter the password and log in to the web management page.

Note: The default log in name and password are admin.

In this management page，click “Help” to download user manual to learn more.

◎Validating the PIN Code

If the PIN code protection is enabled, log in to the web management page and follow the prompts to enter the correct PIN code. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.

◎ Daily Use

Under Device power save mode, if no operation is performed on the router within a preset period (default 10 seconds), the screen turn off. The first short tap POWER button to wakes up the screen.

◎Tips

If you are experiencing difficulties using the router, please try the

following:

※See help on the web management page

※Restart the router.

※Restore factory defaults.

※contact your service provider.